


Sentry[®] QCIII Quick Connect System

Shipping cap o-ring replacement procedure

SHIPPING CAP O-RING REPLACEMENT TOOL KIT

PART NUMBER 01-034594 is the tool kit for replacing the shipping cap o-ring on all Sentry[®] QCIII quick connect systems.

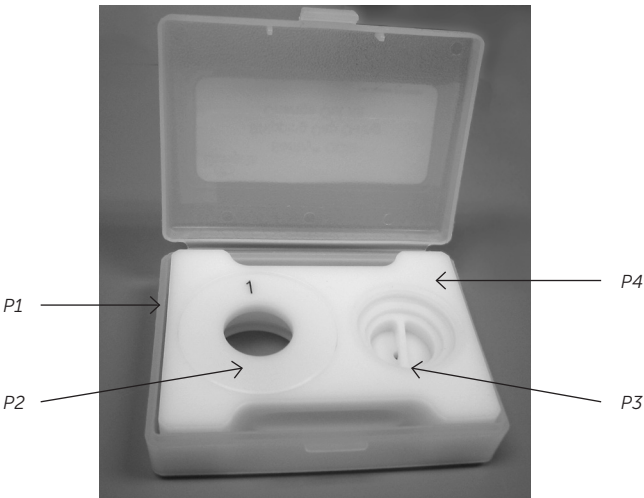

Shipping cap o-ring replacement tool kit

ITEM	DESCRIPTION	QUANTITY
P1	Storage box	1
P2	O-ring removal tool	1
P3	Guide plug	1
P4	Base	1

SHIPPING CAP PREPARATION

1. Remove shipping cap from drum insert.
2. Rinse shipping cap with DI water.
3. Proceed to o-ring removal instructions.

O-RING REMOVAL

1. Remove base from storage box.
2. Attach o-ring removal tool to shipping cap by sliding from the side and over the o-ring.

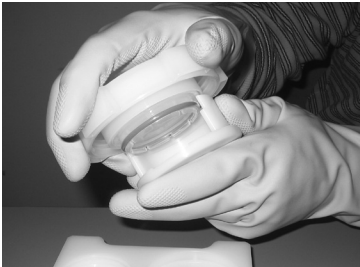


Figure 1.

3. Pry o-ring removal tool from closed side and o-ring will come off shipping cap.



Figure 2.

4. Remove o-ring from the o-ring removal tool with your thumb.

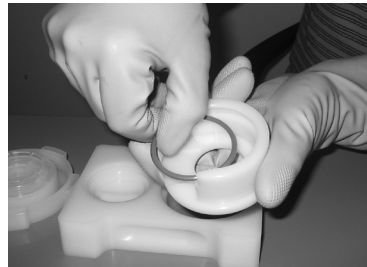


Figure 3.

5. Rinse the shipping cap with DI water.
6. Proceed to the new o-ring installation instructions.

O-RING INSTALLATION

1. Remove guide plug and set adjacent to its storage space.
2. Place new o-ring in the counter bore on the tool kit base.

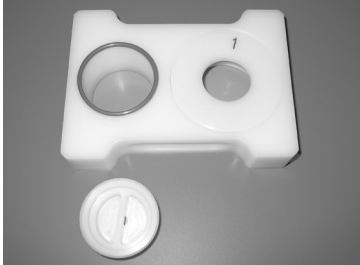


Figure 4.

3. Set the guide plug on top of the o-ring in base.

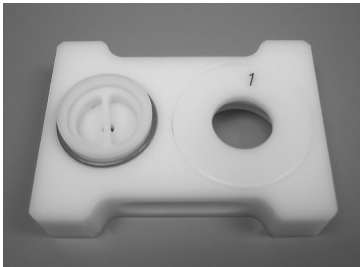


Figure 5.

4. Set shipping cap on top of guide plug.

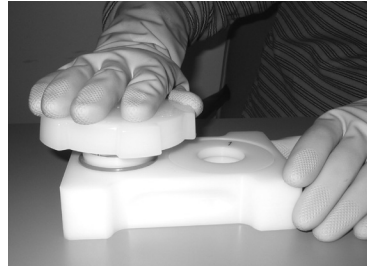


Figure 6.

5. Push straight down until o-ring snaps in place.
6. Lift. The o-ring has been installed.

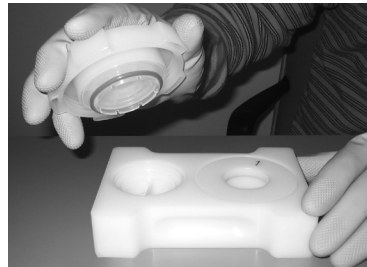


Figure 7.

7. Prior to placing back in the storage box, rinse or clean the tool kit base and components to remove any residual chemical.

FOR MORE INFORMATION

Please call your Regional Customer Service Center today to learn what Entegris can do for you. Visit entegris.com and select the Contact Us link to find the customer service center nearest you.

TERMS AND CONDITIONS OF SALE

All purchases are subject to Entegris' Terms and Conditions of Sale. To view and print this information, visit entegris.com and select the Terms & Conditions link in the footer.



Corporate Headquarters
129 Concord Road
Billerica, MA 01821
USA

Customer Service
Tel +1 952 556 4181
Fax +1 952 556 8022
Toll Free 800 394 4083

Entegris®, the Entegris Rings Design™ and Sentry® are trademarks of Entegris, Inc.

©2006-2017 Entegris, Inc. | All rights reserved. | Printed in the USA | 3560-2443ENT-0517